



Thank you for shopping at Car Builders. Now for the install...

In the table below, you can see where we have allocated individual products in the Suzuki Jimny Packs. Below the table, we also have some product tips. Another helpful resource is our YouTube video where we install this pack

For further questions or concerns, please contact us on 03 8777 0960

**Please PRE-ALLOCATE sheets before sticking Sound Deadener down. You will have to space the sheets out. These are estimations please use as a guide only.*

1 box of Sound Deadener = 12 sheets

Suzuki Jimny Pack 1

	Floor and Quarters	Doors	Roof
Sound Deadener	2 Boxes	1 Box	1 Box
Mass Loaded Vinyl	6 Pieces – Spray Adhesive needed to hold one corner for best fit		
Aluminium Tape	This will be used to border Sound Deadener in the quarter panels.		

Suzuki Jimny Pack 2

	Floor and Quarters	Doors	Roof
Sound Deadener	2 Boxes	1 Box	1 Box
Insul-Layer 6mm			4 Pieces
Mass Loaded Vinyl	6 Pieces – Spray Adhesive needed to hold one corner for best fit		
Aluminium Tape	This will be used to border Sound Deadener in the quarter panels.		

Suzuki Jimny Optional Add On

	Under Bonnet
Premium Under Bonnet Insulation	1 Precut sheet

Tips:

Sound Deadener:

Ensure the surface is clean using a white-based spirit. Map out the allocated Sound Deadener to visualise coverage. Lay the sheet on the surface to assess if/how it needs to be cut to fit in planned area. Reveal the backing of the Sound Deadener. Place an end on the surface and slowly lay it down in a rolling motion until the sheet is laying on the surface. Do not pull the deadener over any depression in the surface, rather feed it down into the valley. Use your application roller to apply moderate pressure evenly across the total surface. Use the handle of the roller to apply pressure in valley areas. Sheets can abut or slightly overlap. There may be sections with gaps between sheets. There is no need to apply to mounts, top hats, cross members etc (you are aiming to cover single sheet metal panels). Ensure you leave clearance for bolt down points and areas that require future access.

Insul Layer:

This foam is a peel and stick product. Ensure you have enough material to account for rises and falls in the shape you're applying it to. Reveal one end of the product and line it up on the surface. Then slowly reveal the backing while rolling the material onto the surface, **ensuring you aren't stretching the product**, rather try to slightly compress the material. This is particularly important when rolling the material into depressions in the sheet metal. If you stretch the

material over and then try to push it into a depression, the material will fight to pop back up. Use the application roller to apply a moderate pressure evenly across the total surface. If you happen to get an air pocket under the material, you can prick through the material to release the air and use the roller to press it down.

Mass Loaded Vinyl






This product is not a peel and stick product. It will sit under its own weight on the floor pan.

We would love to see your project and photos/video of your pack installed. Tag us in your social media so that we can give you a shout out on our social platforms.






SUZUKI JIMNY 4 DOOR FLOOR INSULATION

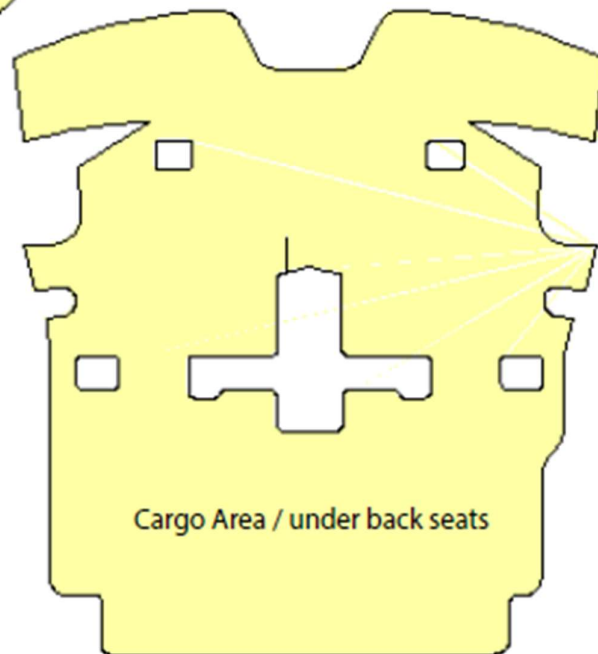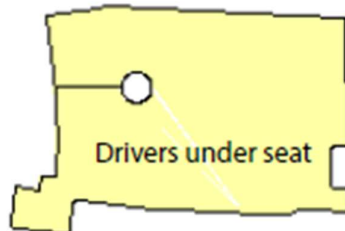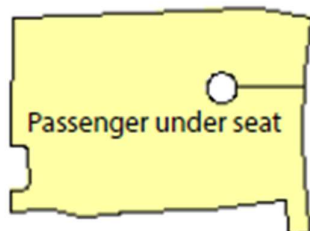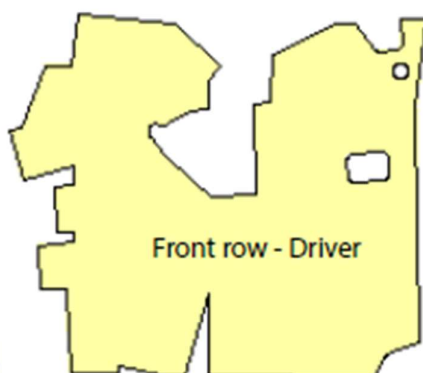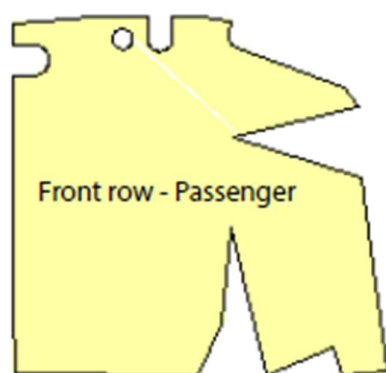

Some areas may require
spray adhesive to hold in
place for best fitment



SUZUKI JIMNY 4 DOOR ROOF INSULATION

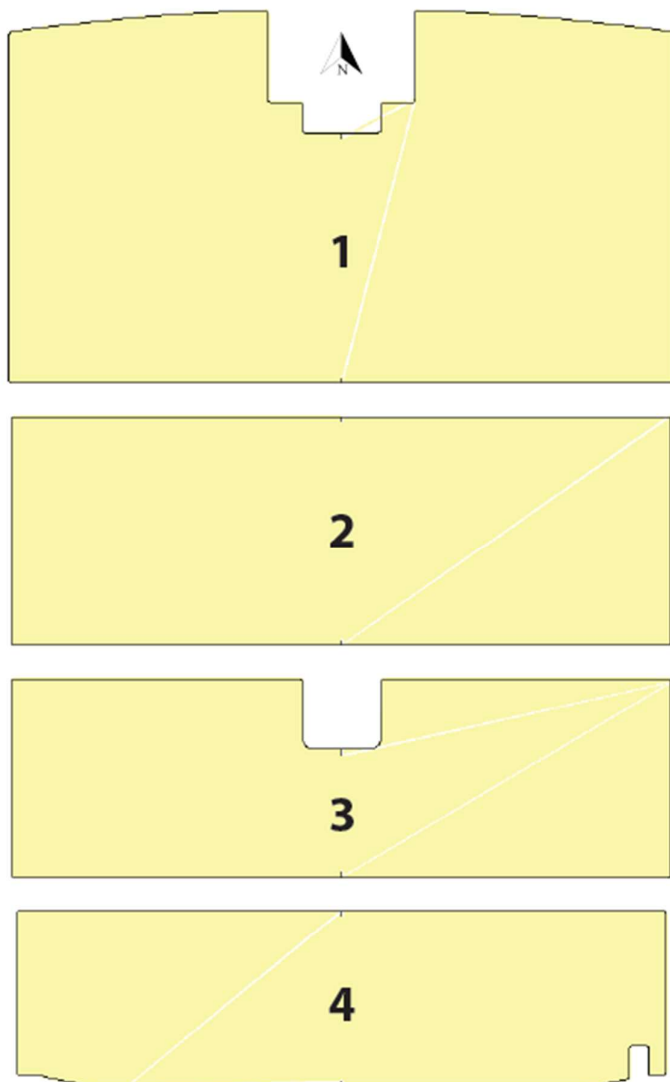

Stage 1 Sound Deadener is applied directly to the roof skin. Use Car Builders' Decent Pair of Scissors for easy install.

Stage 2 Insul-Layer is applied after the Sound Deadener. The single layer foam is precut to fit the roof skin.